RFIDREAD-µRW-USB (125khz and 134kHz models).
RFID reader writer module with USB interface.

Designed for embedding into products manufactured by third-parties, the RFIDREAD-µRW-USB unit is our standard RFIDREAD-µRW module on a USB interface adapter board. This unit allows users to quickly connect a RFID reader/writer to a PC with a standard USB serial port.

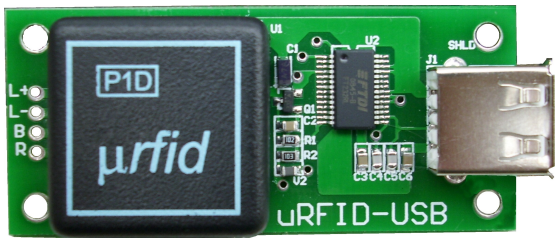

- **Direct connection to a PC's USB port.**
- **Reads EM4100 compatible transponders.**
  64bit Read Only, Manchester Encoded at 64cyc/bit.
  Reads and Writes T55xx compatible transponders.
  Manchester Encoding 32 cyc/bit.
  Read and Write FDX-B Protocol ISO11784/11785
  for animal identification.
  Reads and Writes EM4205 / EM4305 transponders.
  Biphase Encoding 32 cyc/bit.
  Reads and Writes Hitags transponders. Plain mode only.
- **Read Distance: 3.5cm for cards, and keytags.**
- **Ultra small unit size: 66mm x 29mm**
- **Output control for a duel color LED for Pass indication.**
- **Buzzer Output Control for Pass indication.**
- **Integrated RFID Coil Antenna.**

Description.
The RFIDREAD-µRW-USB is designed to read and write the popular range of EM4100 , T55xx/67/xx, EM4205 / EM4305, and Hitags transponders available on the general market.
In addition it can perform read functions on transponders programmed using FDX-B protocol for animal identification as described in ISO11784/11785 standards. It is also capable of programming T55xx, EM4205 / EM4305, and Hitags transponders in FDX-B protocol standard.

In operation the reader will continually scan for either EM4100, T55xx, FDX-B, or EM4205/EM4305 transponders depending on which type has been selected. Hitags will be detected if programmed to Talk first otherwise a scan tag command is needed to detect the tag. The transponder type can be selected by way of pre-defined commands via the Uart Receive line. When the selected transponder is in range it is read and its associated data is transmitted on the Uart Tx line in serial ASCII format.
The command set for the RFIDREAD-µRW describe such functions as:

- Set LED color and Buzzer functions.
- Set Default Transponder type.
- Read Blocks and Write Blocks of data.
- Read and Write Password Protected Blocks.
- Enable/Disable password Protection.
- Emulate EM4100 with T55xx tag.
- Read FDX-B transponders and Write T55xx/EM4205/Hitags in FDX-B protocol.

Connector Pin Description:
The RFIDREAD-µRW-USB derives its power from the USB port supply via connector J1. Command and data information is transferred on this connector in standard ASCII serial protocol.

Additionally the peripheral control outputs allow a duel color led, and buzzer to be used to give audio and visual PASS indications when a transponder comes within reading range. The peripheral control outputs are available as a terminal pad area marked L+, L-, and B. The LED and buzzer outputs can be controlled by setting various options described further.

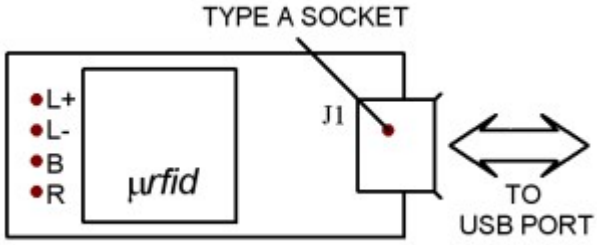

Top View

V+ to GND	-0.3V to 5Vdc
Operating Current ……..	40mA (2)
Operating Temperature Range	0° C to 85°C
Storage Temperature Range	0° C to 85°C

ABSOLUTE MAXIMUM RATINGS (1)
NOTE: (1) Stresses above those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. Exposure to absolute maximum conditions for extended periods may affect unit reliability.
NOTE: (2) May vary due to component variations.

Peripheral control lines are described in Table 1

Label.	Description.
L+	Positive polarity of led output when dual color led is used.
L-	Negative polarity of LED output when dual color led is used. **(1)**
B	Buzzer output control line. This line will go high when the buzzer is active.
R	Unit Reset line. Leave this line unconnected during normal operation.

Table 1. Peripheral Control lines
Note: (1) When using a single color led you may leave pin 2 unconnected, and connect the cathode of the LED to ground.

Example circuit connections:

A simple circuit connection is shown here including a duel color LED and a Buzzer. Duel color LED's can display 2 colors by driving them with alternating polarity. The RFIDREAD-µRW-USB is designed for dual color LED's but an ordinary single color led may be substituted. The alternate color then simply becomes an OFF LED state. When selecting a Buzzer, one that has a self drive circuit is required.

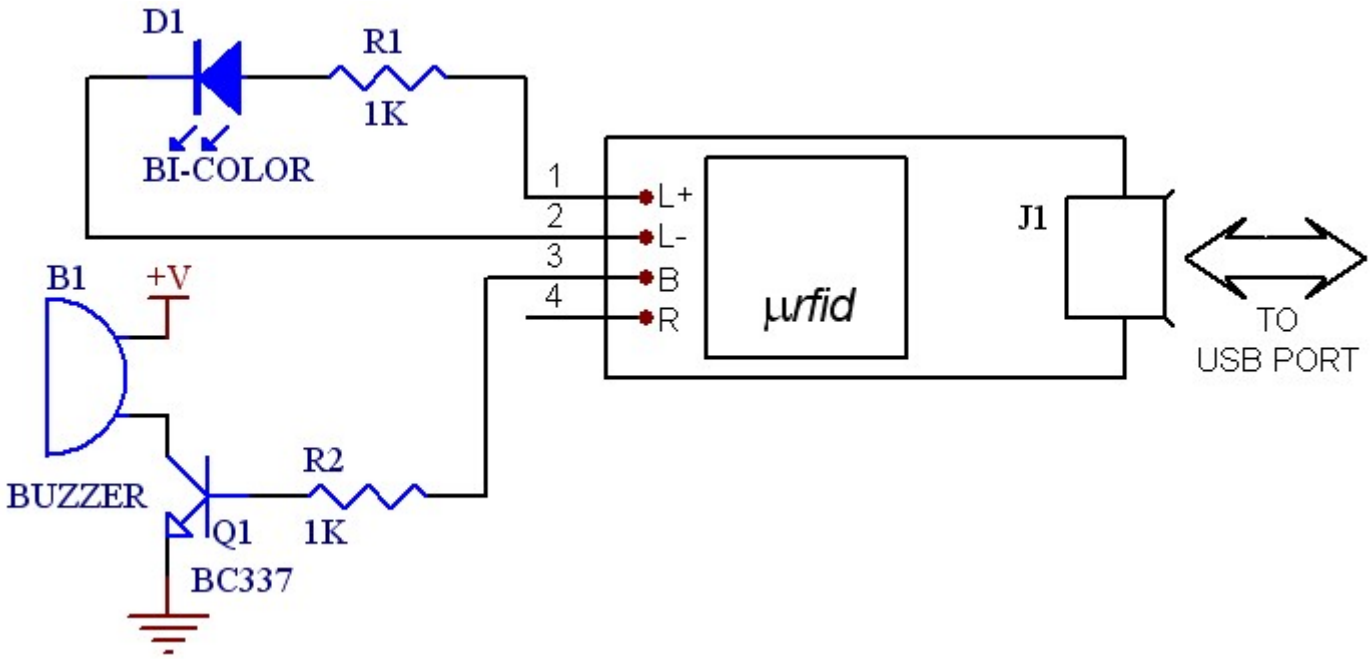

USB driver installation:
The RFIDREAD-µRW-USB uses a USB to Serial device made by FTDI which enables the USB port to become accessible as a virtual serial port. Once installed the reader will appear in the PC's device driver list as shown below.

In the case above the serial port is allocated to serial port COM3 however may vary depending on pre-existing com port hardware and virtual drivers loaded for other applications. The device manager list can be located by selecting the Start>Control Panel>System Menu and then selecting the Hardware>Device tabs.

The USB drivers can be downloaded from https://www.priority1design.com.au/rfidread_usb_driver.exe. Once downloaded simply save the file to any location on your PC and run the executable file. The drivers will automatically be installed on your system. When the RFIDREAD-µRW-USB is next plugged into a USB port on your PC it will be allocated a COM port number as shown above and will be accessible as a serial port by a suitable application program that is able to send and receive ASCII characters to a serial port.

RFID application software:
Our free RFID reader application program allow users to quickly read and write RFID transponders and can be downloaded from https://www.priority1design.com.au/rfidreader.zip Also available for download is our keyboard wedge application which allows users to transfer scanned tag codes to other user applications such as EXCEL, Notepad, or any other application running on a PC that allows keyboard entries to be made. Our more advanced free serial keyboard wedge program Datasnip can be obtained from https://www.priority1design.com.au/datasnip.zip

Frequency of operation:
The RFIDREAD-µRW-USB is available in two models. The RFIDREAD-µRW-USB-125, and RFIDREAD-µRW-USB-134 which differ only in the frequency of the field generated to read and write transponders. These operate at 125kHz, and 134kHz respectively.
When reading and writing FDX-B transponders the RFIDREAD-µRW-USB-134 should be used as this protocol specifies that transponders operate at 134kHz; however in practice the 125kHz readers will also operate with 134kHz transponders with only a slight reduction in read and write range, and vice-versa.

Principle of Operation:
The RFIDREAD-µRW rfid module at the core of this reader generates a magnetic field through its integrated antenna at 125kHz, or 134kHz. Passive RFID transponders also have an integrated antenna that are tuned to the same frequency. When they are within range of the reader unit they are able to draw sufficient power from the electromagnetic field to power their own internal electronics. Once powered they are able to modulate the incident magnetic field which is detected by the reader. In this way the Transponders are able to transmit their data to the reader.

There are many different types of transponders designed to operate at various frequencies, and their functions and the amount of information they carry can also vary. The RFIDREAD-µRW is able to read Transponders optimized for either 125kHz, or 134kHz. It will read EM4100 compatible transponders carrying 64 bits of read only data, read and write T55xx compatible transponders carrying 224 bits of Read/Write memory using Manchester Encoding, and EM4205 / EM4305 transponders that carry 352 bits of useful information using Biphase encoding. It is also capable of reading FDX-B compatible transponders, and programming the T55xx, EM4205/4305, and Hitags using FDX-B animal identification protocol. Additional multiple Hitags transponders employing anti-collision features can be read and written.

As the protocols for transponders differ from each other, the transponder required to be scanned is first selected, or made the default tag. (See further for RFIDREAD-µRW command descriptions).
Once selected the reader will continually scan for this transponder type. When the reader detects the selected RFID tag its data is read for processing and the decoded data sent via ASCII coded serial Output.

Serial Output Format description:
When a successful read of a transponder takes place the unit will transmit a string of information. This string of information will vary in length depending on the type of transponder being scanned, and the configuration of the transponder.

EM4100 transponder Output
The output format for a read of an EM4100 transponder is a simple string of 10 ASCII coded Hexidecimal characters followed by the ASCII code $0D (carriage return) as a string end marker.
For example, when reading a EM4100 compatible card with the Version Number of $06, and a card data of $001259E3 the following string is transmitted:

06001259E3<crn> where <crn> is serial ASCII code $0D

The card information is transmitted once and a new string will not be sent until the transponder moves outside of the scanning range, and it, or another transponder enters scanning range again.
NOTE: Although EM4100 compatible transponders contain 64bits of information not all the bits are defined for user data. Some data bits are allocated as parity check bits and for other functions. To see an overview of the EM4100 protocol see https://www.priority1design.com.au/em4100_protocol.html

T55xx transponder Output.

The output format for a read of a T55xx transponder is slightly more complicated than an EM4100 as it has more data and various options that alter its behavior. The memory structure of the T55xx rfid tags is as shown in Fig 1. T55xx memory structure.

Block memory description.	Example data
Page 0,Block 0, 32 bit Configuration data.	Manchester, max block = 4
Page 0,Block 1, 32 bit R/W Data	12665577
Page 0,Block 2, 32 bit R/W Data	99A0FF56
Page 0,Block 3, 32 bit R/W Data	226390AA
Page 0,Block 4, 32 bit R/W Data	56129800
Page 0,Block 5, 32 bit R/W Data	FFFF0000
Page 0,Block 6, 32 bit R/W Data	99880011
Page 0,Block 7, 32 bit R/W Data, or Password	12345678
Page 1, Block 1, 32bit Trace data	-
Page 1, Block 2, 32bit Trace data	-

Fig 1. T55xx memory structure.

When the tag enters the RF field and powers up it loads the information stored in the configuration block. This tells it what bit rate and encoding scheme to transmit in. It then enters into Regular Read Mode.
In Regular Read Mode the tag will start to transmit its data starting from Block 1, and ending in the block number selected by a parameter known as the Max Block value stored in the configuration data (block 0).
The RFIDREAD-µRW will decode the information coming from the tag and output the data in an ASCII coded string. This is of the form of 8 ASCII hex characters per 32bit block, with each block separated by an ASCII space character $20. The full string is terminated with a carriage return character $0D.
For example, when reading a T55xx compatible card with the example data shown above and a Max Block set to 4 the following string is transmitted:

12665577 99A0FF56 226390AA 56129800<crn> ,where <crn> is serial ASCII code $0D

The card information is transmitted once and a new string will not be sent until the transponder moves outside of the scanning range, and it, or another transponder enters scanning range again. However various block access read and write commands are available for the T55xx as described further. For a more detailed description of the T55xx transponder see https://www.priority1design.com.au/t5557_rfid_transponder.html

FDX-B animal identification transponder Output

The output format for a read of an FDX-B protocol transponder is a simple string of decimal characters indicating the 3 digit country code, and 12 digit National ID followed by the ASCII code $0D (carriage return) as a string end marker.
When a FDX-B programmed transponder enters the field of the reader it will be scanned and a string as shown in the example below is transmitted:

999_000000001008<crn> ,where <crn> is serial ASCII code $0D, and "_" is a data separator

In this example 999 is the country code defined inside the transponder, while 000000001008 is the unique 12 digit decimal code used to identify an animal.
FDX-B protocol transponders may contain additional data which can be accessed using specific commands. See RAT and WAT commands as shown in Table 3. Active Tag Commands Summary further on.

EM4205 / EM4305 transponder Output.

The memory structure of the EM4205 / EM4305 rfid tags is as shown in Fig 2. EM4205 / EM4305 memory structure.

Addr. (dec)	Block description.	Type	Example data
0	Chip Type, Res Cap Customer code/ User free	RW	00040072
1	UID number	RA	4408C25C
2	Password	WO	00000000
3	User free	RW	00000000
4	Configuration word	RW	0002008F
5	User free	RW	1009BC00
6	User free	RW	F9E04020
7	User free	RW	EBEE0201
8	User free	RW	8040201D
9	User free	RW	00000000
10	User free	RW	00000000
11	User free	RW	00000000
12	User free	RW	00000000
13	User free	RW	00000000
14	Protection word 1	RP	00008002
15	Protection word 2	RP	00000000

Fig 2. EM4205 / EM4305 memory structure.

When the tag enters the RF field and powers up it loads the information stored in the configuration block. This tells it what bit rate and encoding scheme to transmit in. It then enters into Default Read Mode.
In Default Read Mode the tag will start to transmit its data starting from Block 5, and ending in the block number selected by a parameter known as the Last Default Word value stored in the configuration data (block 4) before starting to repeat its data from block 5 again without pause.

The RFIDREAD-µRW will decode the information coming from the tag and output the data in an ASCII coded string, however as the EM4205 / EM4305 does not have any form of end terminator pattern there is no practical way for the reader to know how many words are being transmitted unless the configuration block is read first. As this may be read protected the RFIDREAD-µRW will only transmit the data from block 5. The user may then access the remaining blocks of data as required using the Read Block commands (RBxx) described further.

The Output is of the form of 8 ASCII hex characters per 32bit block. The full string is terminated with a carriage return character $0D.
For example: 1009BC00<crn> ,where <crn> is serial ASCII code $0D

The card information is transmitted once and a new string will not be sent until the transponder moves outside of the scanning range, and it, or another transponder enters scanning range again. However various block access read and write commands are available for the EM4205 / EM4305 as described further.

Hitags transponder Output.
The memory structure of the Hitags rfid tags is as shown in Fig 3. Hitags memory structure.

Addr. (dec)	Block description.	Type	Example data
0	UID Unique Identifier code	RO	7D87F320
1	Configuration	RO	AA0000CA
2	User free Data	RW	00000000
3	User free Data	RW	00000000
4	User free Data	RW	0002008F
5	User free Data	RW	1009BC00
6	User free Data	RW	F9E04020
7	User free Data	RW	EBEE0201
8	User free Data	RW	8040201D
9	User free Data	RW	00000000
10	User free Data	RW	00000000
11	User free Data	RW	00000000
.	.	.	.
.	.	.	.
.	.	.	.
63	User free Data	RW	00000000

Fig 3. Hitags memory structure. (2048 bit tag shown)

Hitags transponders have several modes of operation and also have the ability to perform anti-collision functions. This means that several tags can be placed in the field at any one time and the reader will be able to read and access all the tags individually.

As a result of this anti-collision feature of these tags a specific method for detecting and accessing these tags should be used. The following commands illustrate the correct procedure that should be used.

- LTG<crn> Issue a Locate Transponder command. The reader will scan for the UID data of all tags present in the field. All the UID codes will be sent, separated by a carriage return. See LTG command description further in this document.
-SETxxxxxxxx Issue a Select Transponder command to access an individual tag. See SET command description further in this document.

Issue commands as needed.

- RBxx Read block (page) 00 - $3F
- WBxx Write Block (page) 02 - $3F
- WSR3xxxxxxxx Write special register command, allows page 1 (the configuration word) to be set.

Please Note: HITAGS transponders can also be configured for encrypted security operation which requires a special co-processor device to be fitted to the reader. As this reader is not fitted with this co-processor only tags configured in the factory default PLAIN mode will be able to be read and written to.

RFIDREAD-µRW command description.

Various commands and parameter data are sent to the RFIDREAD-µRW via the Uart Rx line on the interface connector (pin 5. RX). Commands sent to the reader consist of simple ASCII strings terminated with a carriage return. The reader will then process the command and respond by transmitting data or status information on the Uart Tx line (pin6. TX)

The reader has various selectable power up options. These options are written to non-volatile memory within the unit and will be retained even after the unit is turned off. These options are:

- Set LED color and function.
- Set Buzzer Function.
- Set Default Transponder type.

LED and Buzzer functions activate for a short period after a successive read of a transponder. The behavior of which can be controlled by the appropriate command. Setting the default transponder controls which transponder type the reader first starts to look for once it is turned on. See Table 2. Setting power up options.

LED Color While Scanning.	LED color Transponder Read.	Serial Command Code.
RED (default)	GREEN (default)	SL0 <crn>
GREEN	RED	SL1 <crn>
LED OFF	GREEN	SL2 <crn>
LED OFF	RED	SL3 <crn>
LED OFF	LED OFF	SL4 <crn>
RED	RED	SL5 <crn>
GREEN	GREEN	SL6 <crn>

* For purposes of illustration a RED/GREEN dual color led is assumed connected.

BUZZER FUNCTION.	Serial Command Code.
BEEP ON READ(default)	SB0<crn>
BUZZER DISABLED	SB1<crn>

DEFAULT TRANSPONDER.	Serial Command Code.
EM4100Read Only	SD0<crn>
T55xx(defaultA) Read/Write Tag	SD1<crn>
FDX-B (defaultB) Read/Write Tag	SD2<crn>
EM4205/EM4305 Read/Write Tag	SD3<crn>
Hitags Read/Write Tag	SD4<crn>

Table 2. Setting power up options. <crn>= ASCII carriage return code $0D

DefaultA: 125Khz models factory default to T55xx tags.
DefaultB: 134Khz models factory default to FDX-B tags.

When a command is processed successfully the reader will respond with the standard response of :

OK<crn>

If the command is misunderstood, a status code is sent back. See **Error Codes and Status Description**.

Additionally the RFIDREAD-µRW features the following commands as summarized in Table 3. Active Tag Commands summary.

Command Description	Serial Command Code.
LOCATE TRANSPONDER	LTG<crn>
SELECT TAG TYPE	STx<crn>
READ BLOCK (T55--) (EM4----)	RBx<crn>
WRITE BLOCK (T55--) (EM4----)	WBx<32bit Data><crn>
READ PASSWORDED BLOCK (T55--)	RPx<32bit Password><crn>
WRITE PASSWORDED BLOCK (T55--)	WPx<32bit Password><32bit Data><crn>
SET MAXIMUM BLOCK (T55--)	SMx<crn>
ENABLE PASSWORD PROTECTION (T55--) (EM4---)	PWE<crn>
DISABLE PASSWORD PROTECTION (T55--) (EM4---)	PWD<32bit Password><crn>
READ CONFIGURATION BLOCK (T55--)	RCB<crn>
SETUP CONFIGURATION BLOCK (T55--)(EM4---)	SCB<crn>
WRITE EM4100 PROTOCOL (T55--)	WEP<40bit Data><crn>
READ TRACE DATA (T55--)	RTD<crn>
READ STANDARD DATA	RSD<crn>
READ ANIMAL TAG (FDX-B)	RAT<crn>
WRITE ANIMAL TAG (FDX-B)	WAT<crn>
WRITE SPECIAL REGISTER (EM4---)	WSRx<crn>
SET READER DE-ACTIVE	SRD<crn>
SET READER ACTIVE	SRA<crn>
READ FIRMWARE VERSION CODE	VER<crn>
MEASURE OPERATING FREQUENCY	MOF<CRN>
SELECT TRANSPONDER (Hitags)	SET<32bit UID code>

Table 3. Active Tag Commands Summary. x denotes block address, or extra data field.
(T55--) denotes T55xx tag commands only
(FDX-B) denotes FDX-B protocol tag commands.
(EM4---) denotes EM4205 / EM4305 protocol tag commands.
(Hitags) denotes Hitags protocol tag commands.

Locate Transponder Command.
When a transponder enters the scanning field of the reader its data is decoded and transmitted on the Uart Tx line; however once data is sent there is no indication that the tag is still within scanning range. At some point it may have been removed. The Locate Transponder commander is useful in determining if a tag is still present. The command protocol for which is shown here, along with the available responses.

Protocol: **LTG<crn>** ,where <crn> is $0D carriage return.

Command Protocol Example	**Response.**	**Description.**
LTG<crn>	**?1<crn>**	**Tag not present**
	OK<crn>	**Tag present**

When Hitags is the selected transponder the LTG command operates differently. In this case the reader will scan for the UID codes of all the transponders preset and report the detected UID codes.

Command Protocol Example	**Response.**	**Description.**
LTG<crn>	**7D87F320<crn>**	**UID detected.**
	7D87F400<crn>	**UID detected.**
	OK<crn>	

Note. The last detected UID will be assumed to be the Selected UID. See the SET command further in this document for details on the Select transponder feature.

Select Tag Type Command.
This command is almost identical to the Set Default Transponder command, except that the parameters are not stored to non volatile memory. On power up the selected tag will always revert back to that set using the Set Default Transponder command.
This command is used for alternating between scanning for one type of transponder and another. A user may elect to scan for an EM4100 tag during, for example, a 1 second period and a T55xx tag the next, in alternating fashion.
Special Note: The Select Tag command also introduces a 5 second lockout of the reader's normal Pass indication and serial output. If a tag enters the field within 5 seconds of issuing this command it will not transmit the card data, or issue LED and buzzer indications. This is to prevent contradictory data being sent to any scanning program accessing the reader while a tag enters the scanning field.

Protocol: **STx<crn>** ,where x = tag type code 0 to 1, <crn> is $0D carriage return.

Command Protocol Example	Response.	Description.
ST0<crn>	**OK<crn>**	**EM4100 Tag selected**
ST1<crn>	**OK<crn>**	**T55xx Tag selected**
ST2<crn>	**OK<crn>**	**FDX-B Tag selected**
ST3<crn>	**OK<crn>**	**EM4205 / EM4305 Tag selected**
ST4<crn>	**OK<crn>**	**Hitags Tag selected**

Read Block Command.
This command is valid for T55xx tags not in password mode, EM4205 / EM4305, and Hitags transponders.

Protocol: **RBy<crn>** **,**T55xx tag where y is the block address 1 to 7, <crn> is $0D carriage return.
RBxx<crn> ,EM4205 / EM4305, or Hitags tag, where xx is the page address in Hexidecimal format.

T55xx Command Protocol Example	Response.	Description.
RB1<crn>	**?1<crn>**	**Tag not present**
.	**aabbccdd<crn>**	**8 ASCII hex bytes representing . 1 block of 32bit data is returned**
RB7<crn>		

If this command is sent while the tag is in password mode, the command will be ignored by the transponder and it will revert to standard read mode. In this case the returned information will be one or more blocks of 32bit data depending on the Max Block setting stored within the transponder configuration block.

EM4205 / EM4305, Hitags

Command Protocol Example	Response.	Description.
RB01<crn>	**?1<crn>**	**Tag not present**
.	**11223344<crn>**	**8 ASCII hex bytes**
.	**?2<crn>**	**Bad Read, possibly password protected, wrong address, or Hitags not present.**
.		
RB0F<crn>	**?1<crn>**	**Tag not present**
	00008002<crn>	**8 ASCII hex bytes**

NOTE. Hitags tags will need to be Selected first using the SET or LTG command.

If an EM4100 tag is selected then Read block command is invalid.
Standard read response for an EM4100 transponder.

Command Protocol Example	Response.	Description.
RB1<crn>	**?1<crn>**	**Tag not present**
.	**?2<crn>**	**Invalid read or Write for**
.		**EM4100 data.**
RB7<crn>		

Write Block Command.
This command is valid for T55xx tags not in password mode, EM4205 / EM4305, and Hitags transponders.

Protocol: **WBx<32bit Data><crn>** ,where x is the block address 1 to 7, <crn> is $0D carriage return.
WBxx<32bit Data><crn> ,EM4205 / EM4305, or Hitags tag, where xx is the page address in Hexidecimal format.

T55xx Command Protocol Example	Response.	Description.
WB1aabbccdd<crn>	**?1<crn>**	**Tag not present**
.	**?2<crn>**	**Tag failed to Write**
.	**OK<crn>**	**Data written. (aabbccdd)**
WB7aabbccdd<crn>		

If this command is sent while the tag is in password mode, the command will be ignored by the transponder

EM4205 / EM4305, Hitags

Command Protocol Example	Response.	Description.
WB05aabbccdd<crn>	**?1<crn>**	**Tag not present**
.	**?2<crn>**	**Tag failed to Write**
.	**OK<crn>**	**Data written to block 5.**
WB0Daabbccdd<crn>		**(aabbccdd)**

Read Passworded Block Command.
This command is only valid if the T55xx transponder is selected, and the tag is in password mode.
T55xx Transponders have 7 blocks of 32bits of read/write memory. The blocks are addressed in the range of block 1 to block 7. It is used to read the 32bits of data of a selected block with password protection.

Protocol: **RPx<32bit Password><crn>** ,where x is the block address 1 to 7, <crn> is $0D carriage return and 32bit password is expressed as 8 ASCII hex bytes.

Command Protocol Example	Response.	Description.
RP1FFAACC00<crn>	**?1<crn>**	**Tag not present**
.	**aabbccdd<crn>**	**8 ASCII hex bytes representing .**
		1 block of 32bit data is returned
RP7FFAACC00<crn>		

If this command is sent while the tag is not in password mode, the command will be ignored by the transponder and it will revert to standard read mode. In this case the returned information will be one or more blocks of 32bit data depending on the Max Block setting stored within the transponder configuration block.

Write Passworded Block Command.
This command is only valid if the T55xx transponder is selected, and the tag is in password mode.
T55xx Transponders have 7 blocks of 32bits of read/write memory. The blocks are addressed in the range of block 1 to block 7. It is used to write 32bits of data to a selected block with password protection.

Protocol: **WPx<32bit Password><32bit Data><crn>** ,where x is the block address 1 to 7, <crn> is $0D carriage return, and 32bit password is expressed as 8 ASCII hex bytes.

CAUTION. Only issue this command if the Tag is in Password protection mode otherwise data corruption may occur. A transponder that is not in password mode will misinterpret the password for data and an incorrect write will occur.

Command Protocol Example	Response.	Description.
WP112345678aabbccdd<crn>	**?1<crn>**	**Tag not present**
.	**?2<crn>**	**Tag failed to Write**
.	**OK<crn>**	**Data written. (aabbccdd)**
WP712345678aabbccdd<crn>		

In this example the password is $12345678 stored in block 7

Set Maximum Block Command.
This command is only valid if the T55xx transponder is selected, and the tag is not in password mode.
As discussed earlier in this document the T55xx transponders enter Standard Read mode when they first enter the RF field of the reader. In this mode they will start transmitting data from block 1 to a block address defined in the configuration block. This value is the Max Block value and can be any value from 0 to 7.
If the password mode is to be used for the tag then the maximum block should not be set to 7 as this will cause the password that is stored in block 7 to be transmitted. Note also that if the maximum block is set to 0 this will cause the configuration block to be transmitted only.
This command is useful when an application requires that part of the data stored on the tag be automatically transmitted, in other words “public data”, while the upper blocks remain private, readable only though a direct block read command.

Protocol: **SMx<crn>** ,where x is the Max Block value required (0 to 7), <crn> is $0D carriage return.

Command Protocol	Response.	Description.
SM0<crn>	**?1<crn>**	**Tag not present**
.	**?2<crn>**	**Tag failed to Write**
.	**OK<crn>**	**Max value Set ok.**
SM7<crn>		

Enable Password Protection.
This command is valid for T55xx tags not in password mode, or EM4205 / EM4305 transponders. This command does a write to the configuration block of the tag and sets the Password control bits.
Following this command all direct block access commands for the T55xx tag require a password to be sent.
The EM4205 / EM4305 requires a login command to be sent before block access command can be sent. See Write Special Register command (WSRx) further.
Note that when a T55xx tag first enters scanning range it will start transmitting from block 1 to the value set by the Max Block parameter. If there are locations that are required to be kept private a Max Block value below that required to be private should be set.

Protocol: **PWE<crn>** ,where <crn> is $0D carriage return.

Command Protocol	Response.	Description.
PWE<crn>	**?1<crn>**	**Tag not present**
	?2<crn>	**Tag failed to Write**
	OK<crn>	**Password mode enabled.**

Disable Password Protection.
This command is only valid if the T55xx, or EM4205 / em4305 transponder is selected, and the tag is in password mode.
This command performs a write to the configuration block of the tag and clears the Password control bits.
Following this command all direct block access commands do not require a password or a login to be sent.

Protocol: **PWD<32bit Password><crn>** ,where <crn> is $0D carriage return.

Command Protocol	Response.	Description.
PWD<12345678><crn>	**?1<crn>**	**Tag not present**
	?2<crn>	**Tag failed to Write**
	OK<crn>	**Password mode disabled.**

In this example the password is $12345678 stored in block 7 for the T55xx, or block 2 for the EM4205 / EM4305

CAUTION. For T55xx tags only issue this command if the Tag is in Password protection mode otherwise data corruption may occur. A transponder that is not in password mode will misinterpret the password for data and an incorrect write will occur. As this command accesses the configuration block writing incorrect data to this block may render the tag unreadable. This can occur if the tag is set to operate with an encoding scheme other than one that the RFIDREAD-µRW is designed to operate with.

Read Configuration Block Command.
This command is only valid if the T55xx transponder is selected, and the tag is not in password mode. This command is used to read the configuration block (block 0).

Protocol: **RCB<crn>** ,where <crn> is $0D carriage return.

Command Protocol	Response.	Description.
RCB<crn>	**?1<crn>**	**Tag not present**
	aabbccdd<crn>	**8 ASCII hex bytes representing the 32bit configuration block.**

Setup Configuration Block Command.
This command is valid for T55xx and EM4205 / EM4305 tags that are not in password mode.
The RFIDREAD-µRW currently only reads T55xx tags setup for Manchester Encoding, 32cyc/bit, with Sequence terminator active, and EM4205 / EM4305 tags using Biphase 32cyc/bit . This is usually the default factory setting for tags however the user may encounter transponders setup otherwise. If the configuration block has not been locked, or password protected the use of this command will set the transponder to the appropriate mode for this reader.

Protocol: **SCB<crn>** ,where <crn> is $0D carriage return.

Command Protocol	Response.	Description.
SCB<crn>	**?2<crn>**	**Tag failed to Read/Write**
	OK<crn>	**Tag setup successfully.**

Note: The Tag type selected will be set to T55xx after using this command.

Write EM4100 Protocol Command.
This command is only valid if the T55xx transponder is selected, and the tag is not in password mode. EM4100 protocol tags are Read Only and their data is factory set. This presents a problem when a duplicate tag, or a tag with predefined data is required. This command solves this problem by writing the data and configuration block of a T55xx Read/Write tag so that it appears to function as a EM4100 tag to a standard reader.

Protocol: **WEP<40 bit data><crn>** ,where <crn> is $0D carriage return.

Command Protocol	Response.	Description.
WEP1200071239<crn>	**?1<crn>**	**Tag not present**
	OK<crn>	**T55xx Tag will now function as a EM4100 tag.**

In this example the T55xx Tag will now behave as an EM4100 protocol Tag with a Version Number of $12, and a data of $00071239. The RFIDREAD-µRW will still be selected for T55xx tags after this command. To read the Tag with the new protocol a Set Tag Type command (STx), or Set Default Tag (SDx) will need to be sent in order to read EM4100 protocol tags. In order to return the T55xx tag to its normal function a Setup Configuration Block (SCB) command can be used.

Read Trace Data Command.
This command is only valid if the T55xx transponder is selected, and the tag is not in password mode. This command is used to read the two blocks of Trace information stored in page 1 of the T55xx transponders. These are Read Only blocks and carry manufacturer codes, lot numbers, and other such data for tracing the source of the transponder.

Protocol: **RTD<crn>** ,where <crn> is $0D carriage return.

Command Protocol	Response.	Description.
RTD<crn>	**?1<crn>**	**Tag not present**
	E0150156 1411081C<crn>	**2 x 8 ASCII hex bytes representing 2 blocks of Trace data.**

Read Standard Data.
This command is valid for all transponder types, and Hitags if TTF mode is enabled. It is used to tell the reader to output the tag's standard data that it normally transmits when it first enters the RF field of the reader. This command is generally used in conjunction with the Set Tag command for continuous polling purposes. The Set Tag command is first issued, which creates a 5 second lockout of the normal serial communications. During this 5 second window the Read Standard Data command is issued to read the data of any tag currently within scanning range.

Protocol: **RSD<crn>** ,where <crn> is $0D carriage return.

Command Protocol	Response.	Description.
RSD<crn>	**?1<crn>**	**Tag not present**
	E0150156 1411081C<crn>	**Standard data for Tag.**

Read Animal Tag Data .
This command is only valid if a FDX-B transponder is selected. This command is used to read information on a transponder encoded using FDX-B animal identification protocol as defined in ISO11784/11785.

Protocol: **RAT<crn>** ,where <crn> is $0D carriage return.

Response:
country code_national identity code_animal bit status_ data block status_checkbits_data block <crn>
,where <crn> is $0D carriage return.
, "_ " is a separator between data fields

Country code is a 3 decimal digit value used to refer to individual manufacturers. A code of 999 is used to indicate that the transponder is a test transponder and need not contain a unique identification number.
National identity code is an unique 12 digit decimal number within a country.
Animal bit status is a single digit indicating whether the transponder is used for animal identification or not. This value is set to 1 to indicate an animal identification application, and 0 otherwise.
Data block status is an indicator flag to indicate whether an additional data block exists. A value of 1 indicates that the transponder contains an additional 24 bit data block. Otherwise it is 0.
Checkbits are a 16 bit cyclic redundancy value used to check the data within a transponder.
Data Block is the information contained in the extra data block if the Data block status is 1. When the Data block status flag is 0 this value will be transmitted as 000000.
Eg.

Command Protocol	Response.	Description.
RAT<crn>	**?1<crn>**	**Tag not present**
	999_000000001007_1_0_AEC4_000000<crn>	**String data response**

Write Animal Tag Data .
This command is only valid if a FDX-B transponder is selected. This command is used to write information onto a T55xx, EM4205 / EM4305, or Hitags transponder encoded according to FDX-B animal identification protocol as defined in ISO11784/11785.

Protocol: **WAT<country code>_<national identity code>_<animal bit status>_<data block>_<transponder type> <crn>**
, where <crn> is $0D carriage return.
, data block field may be omitted if not required.
, Transponder type is "0" for T55xx transponders.
, "1" for EM4205 / EM4305
, "2" for Hitags

Country code is a 3 decimal digit value used to refer to individual manufacturers. A code of 999 is used to indicate that the transponder is a test transponder and need not contain a unique identification number.
National identity code is an unique 12 digit decimal number within a country.
Animal bit status is a single digit indicating whether the transponder is used for animal identification or not. This value is set to 1 to indicate an animal identification application, and 0 otherwise.
Data Block is a 6 Hexidecimal string denoting the 24 bits of data to be written into the extra data block of the transponder. If the transponder does not require an extra data block this field may be omitted.

Eg.

Command Protocol	**Response.**	**Description.**
WAT999_000000001007_1_0<crn>	**?1<crn>**	**Tag not present**
	OK<crn>	**Write performed.**

Country code is 999, National identity code is 000000001007, and Animal status bit set to animal application. Is this form there is no extra data block appended. In this example transponder type is T55xx. Data block status bit is automatically set to 0 as the extra data block information has not been included in the command string.
In this case the extra data block is set to $000000.

Eg.

Command Protocol	**Response.**	**Description.**
WAT999_000000001007_1_123456_1<crn>	**?1<crn>**	**Tag not present**
	OK<crn>	**Write performed.**

Country code is 999, National identity code is 000000001007, and Animal status bit set to animal application. Extra data block contains $123456. The Data Block status bit is automatically set to 1 to indicate the presence of the data block. In this example transponder type is EM4205 / EM4305

Write Special Register Command.
This command is valid for the EM4205 / EM4305 and HITAGS transponder when selected.
When used with the EM4205 / EM4305 transponder this command is used to send a login command to the tag in order to gain read and write access while the tag is in password protected mode, or to gain write access to the protection bits.
When used with the HITAGS transponder this command is used to write the configuration bits in page 1.

Protocol: **WSRx<32bit data><crn>** , where x = 1 for login EM4205 / EM4305
, x = 2 to write protection bits EM4205 / EM4305
, x = 3 to write configuration bits in page 1 for HITAGS
, <crn> is $0D carriage return.

Eg.

Command Protocol	Response.	Description.
WSR1<FFFF0101><crn>	**?2<crn>**	**Login not successful.**
	OK<crn>	**Login successful.**

Where in this example $FFFF0101 is the password stored into block 2 of the EM4205 / EM4305.

WSR2<00000001><crn>	**?2<crn>**	**Write not successful.**
	OK<crn>	**Write successful.**

Where in this example 00000001 is the 32 bit protection bit data of the EM4205 / EM4305. Only bits 0-15 are valid, the rest are don't care. Once you set a bit in the protection register it can't be cleared.

WSR3<AA0100CA><crn>	**?2<crn>**	**Write not successful.**
	OK<crn>	**Write successful.**

This is a HITAGS configuration page write where in this example AA0100CA is the 32 bit data written.

Set Reader De-active Command.
This command is used to turn off the RF field emitted by the reader. Tags can not be scanned while in this mode. This mode is used to prevent the RF field of the reader from interfering with other readers in the vicinity.
The command protocol for which is shown here, along with the available responses.

Protocol: **SRD<crn>** ,where <crn> is $0D carriage return.

Command Protocol Example	Response.	Description.
SRD<crn>	**OK<crn>**	**RF field is turned off**

On power up the reader will default to Reader Active mode.

Set Reader Active Command.
This command is used to turn on the RF field emitted by the reader after it has been turned off using the Set Reader De-active Command. Tag scanning will resume in this mode.
The command protocol for which is shown here, along with the available responses.

Protocol: **SRA<crn>** ,where <crn> is $0D carriage return.

Command Protocol Example	Response.	Description.
SRA<crn>	**OK<crn>**	**RF field is turned on.**

Measure Operating frequency command.
This will cause the unit to take a measurement and report the operating frequency of the internal antenna.

Protocol: **MOF<crn**> ,<crn> is $0D carriage return.

Command Protocol Example	Response.	Description.
MOF<crn>	**134.2<crn>**	**Measured frequency = 134.2 kHz**

This operation will require 1 second for the measurement to be taken and a response issued.

READ FIRMWARE VERSION CODE.
This command is used to read the firmware version number of the reader.

Protocol: **VER<crn>** , crn> is $0D carriage return.

Eg.

Command Protocol	Response.	Description.
VER<crn>	**207<crn>**	**Current Version number.**

SELECT TRANSPONDER.
This command is only valid if the Hitags transponder is selected.

Protocol: **SET<32 bit UID code><crn>** , crn> is $0D carriage return.

Eg.

Command Protocol	Response.	Description.
SET<7D87F320><crn>	**OK<crn>**	**Hitags tag with UID = 7D87F320 is selected. All subsequent RBxx,WBxx, WSR3<data> commands will address this tag.**

Error Codes and Status Description.

The RFIDREAD-µRW unit will respond to every command with either the requested data, or one of these status strings summarized here.

ERROR AND STATUS CODES.	DESCRIPTION.
?0<crn>	Command not understood.
?1<crn>	Tag not present.
?2<crn>	Tag failure to Read/Write.
?3<crn>	Access to Block 0 not allowed
OK<crn>	Function Performed Successfully.

Table 4. Error Codes and Status Description summary.

Serial protocol description:
The protocol for the Serial Input and Output lines is 9600 Baud, 8 data bits, 1 stop bit, no parity.
These lines are TTL level only. If a RS232 interface is required then an appropriate level translation circuit should be used.

Limitations of the RFIDREAD-µRW.
The T55xx transponders are capable of being set up with various encoding schemes and bit rates. However the RFIDREAD-µRW currently only reads transponders using Manchester Encoding schemes at a bit rate of 32 cycles per bit, with the Sequence terminator pattern active. For this reason limitations have been placed on Write executions to the configuration block in order to prevent accidentally placing the transponders into an unreadable mode of operation.
EM4205 / EM4305 transponders can only be read if using Biphase encoding at 32 cycles per bit.

For applications regarding other encoding schemes, bit rates, and transponder types please contact our technical department via our web site at https://www.priority1design.com.au/

The effects of noise on the RFIDREAD-μRW.

Reading a passive RFID transponder requires a sensitive receiver to read the data over the reading distance of the tag. As this requires detecting minute signals any electrical noise in the environment will affect read range. It is advisable to use a well regulated voltage supply free of additional noise otherwise read and write range can be drastically reduced. In addition the presence of noisy electronics such as high speed microprocessors, switch mode power supplies, or signals from other noisy sources such as USB interfaces will also impact the readers performance.

Dimensions:

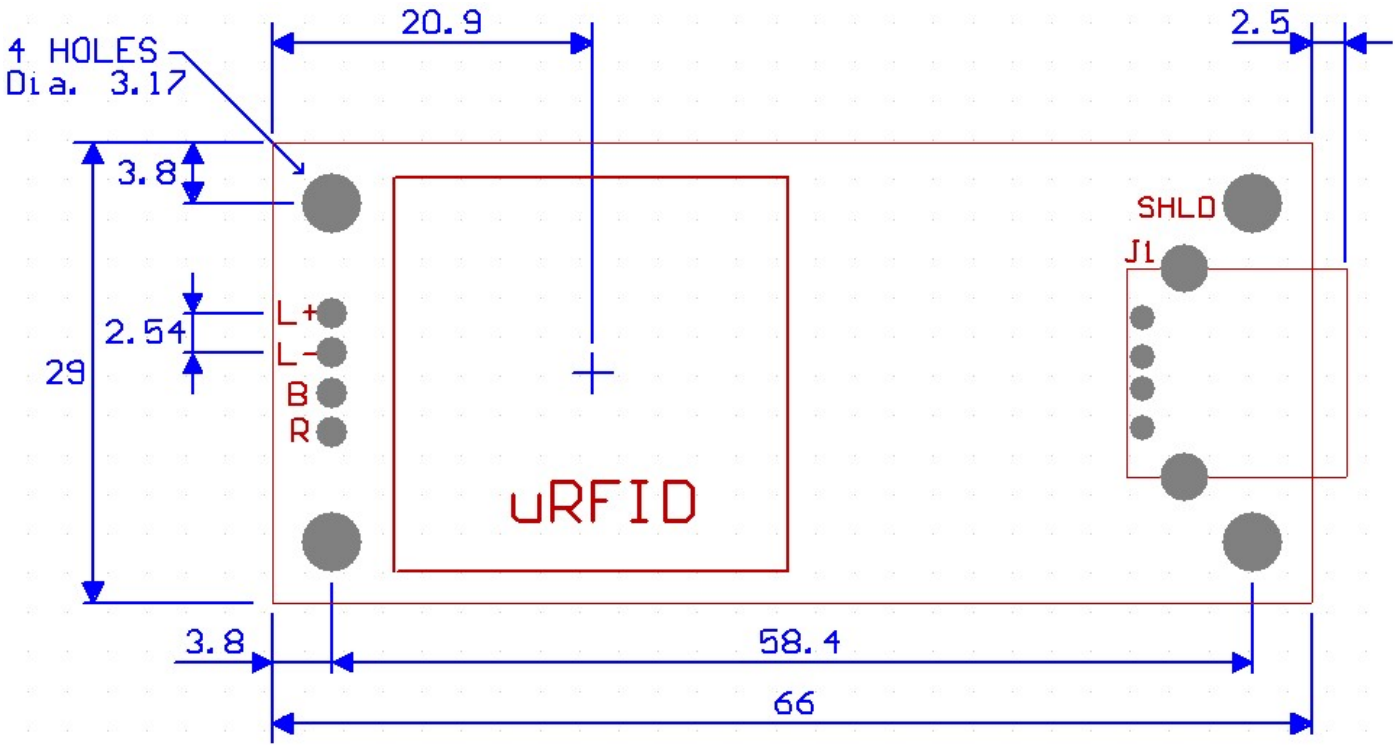

All dimensions in Millimeters.

Disclaimers.

Priority 1 Design reserves the right to change specifications and prices at any time and without notice. Priority 1 Design shall not be liable to recipients or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interrupt of business or indirect, special incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of products supplied, or the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of Priority 1 Design rendering of technical or other services.

Life support — This product is not designed for use in life support appliances, devices, or systems where malfunction of these products can reasonably be expected to result in personal injury. Priority 1 Design customers using or selling this product for use in such applications do so at their own risk and agree to fully indemnify Priority 1 Design for any damages resulting from such application.